


1109 1/4" AIR SCREWDRIVER

EXPLODED VIEW

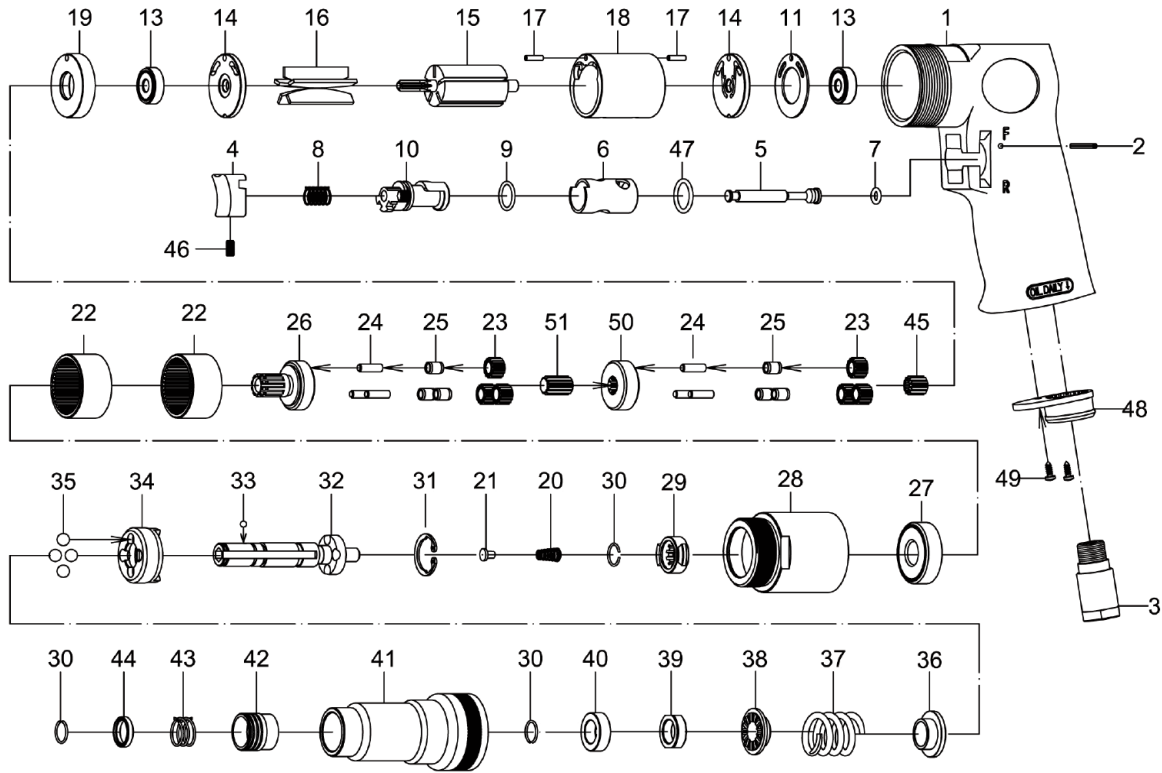

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	80201	Motor Housing	1	27	080227	Ball Bearing	1
2	80202	Spring Pin	1	28	80328	Clamp Nut	1
3	70103	Air Inlet	1	29	80229	Drive Clutch	1
4	70104	Trigger	1	30	80230	Retaining Ring	3
5	80205	Valve Stem	1	31	80231	Snap Ring	1
6	80206	Reverse Bushing	1	32	80232	Cam Spindle	1
7	70107	O-Ring	1	33	40145	Steel Ball	1
8	70108	Valve Spring	1	34	80234	Clutch	1
9	80209	O-Ring	1	35	80235	Steel Ball	4
10	80210	Reverse Lever	1	36	80236	Thrust Washer	1
11	80211	Motor Gasket	1	37	80237	Spring	1
13	030113	Ball Bearing	2	38	80238	Washer	1
14	80214	End Plate	2	39	80239	Adjust Nut	1
15	80215	Rotor	1	40	80240	Spacer	1
16	80216	Rotor Blades	5	41	80241	Clutch Housing	1
17	80217	Spring Pin	2	42	80242	Ball Retainer	1
18	80218	Cylinder	1	43	80243	Spring	1
19	80219	Spacer	1	44	80244	Washer	1
20	80220	Spring	1	45	70420	Pinion Gear	1
21	80221	Spring Guide	1	46	70935	Set Screw	1
22	80222	Internal Gear	2	47	80247	O-Ring	1
23	70423	Planet Gear	6	48	70110	Exhaust Diffuser	1
24	30124	Pin	6	49	40309	Screw	2
25	70425	Bushing	6	50	70427	Reduction Spindle	1
26	80326	Work Spindle	1	51	70421	Center Gear	2

FOOTNOTES

EAGLE

10000 SE Pine Street
Portland, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number and description.