


# EPTS-33011P-25Q 1/4" HEX AUTO SHUTOFF AIR SCREWDRIVER

## EXPLODED VIEW

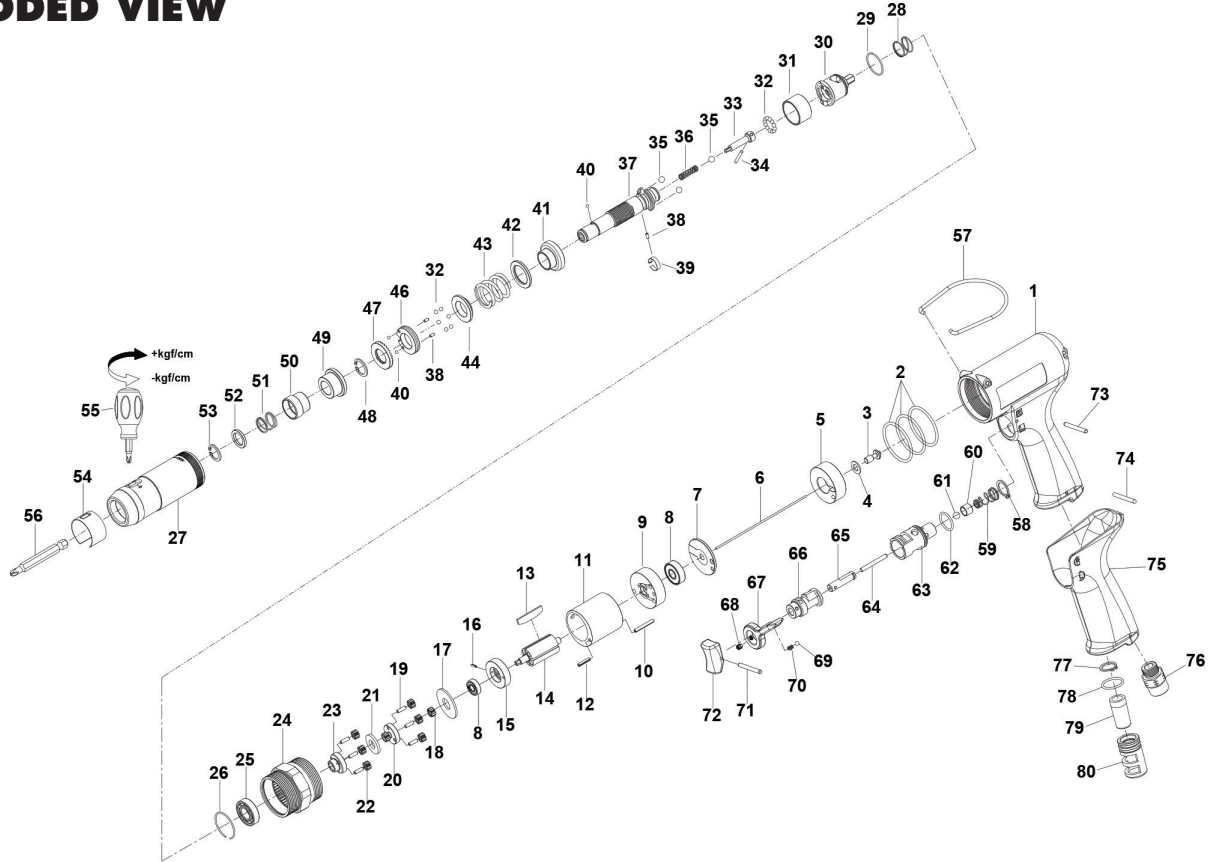

### PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	EPTS-33011P-25Q-1	Motor Housing	1	33	EPTS-33011P-25Q-33	Pilot Pin	1	72	EPTS-33011P-25Q-72	Trigger	1
3	EPTS-33011P-25Q-3	Shut-off Valve	1	34	EPTS-33011P-25Q-34	Pin	1	73	EPTS-33011P-25Q-73	Pin	1
4	EPTS-33011P-25Q-4	Washer	1	37	EPTS-33011P-25Q-37	Standard Anvil	1	74	EPTS-33011P-25Q-74	Pin	1
5	EPTS-33011P-25Q-5	Handle Bushing	1	38	EPTS-33011P-25Q-38	Pin	3	75	EPTS-33011P-25Q-75	Rubber Grip	1
6	EPTS-33011P-25Q-6	Throttle Valve Plunger	1	39	EPTS-33011P-25Q-39	Band	1	76	EPTS-33011P-25Q-76	Air Inlet	1
7	EPTS-33011P-25Q-7	Rear Plate Space	1	41	EPTS-33011P-25Q-41	Central Clutch	1	77	EPTS-33011P-25Q-77	Retainer	1
8	EPTS-33011P-25Q-8	Ball Bearing	2	42	EPTS-33011P-25Q-42	Washer	1	79	EPTS-33011P-25Q-79	Muffler	1
9	EPTS-33011P-25Q-9	Rear End Plate	1	44	EPTS-33011P-25Q-44	Spring Collar	1	80	EPTS-33011P-25Q-80	Exhaust Deflector	1
10	EPTS-33011P-25Q-10	Spring Pin	1	46	EPTS-33011P-25Q-46	Adjustment Lock Ring	1				
11	EPTS-33011P-25Q-11	Cylinder	1	47	EPTS-33011P-25Q-47	Adjustment Nut	1		EPTS-33011P-25Q-TK	Tune Up Kit (parts available in kit only)	1
12	EPTS-33011P-25Q-12	Spring Pin	1	48	EPTS-33011P-25Q-48	Retainer	1	2		O-Ring	3
14	EPTS-33011P-25Q-14	Rotor	1	49	EPTS-33011P-25Q-49	Bushing	1	13		Rotor Blade	4
15	EPTS-33011P-25Q-15	Front End Plate	1	50	EPTS-33011P-25Q-50	Release Sleeve	1	28		Spring	1
16	EPTS-33011P-25Q-16	Spring Pin	1	52	EPTS-33011P-25Q-52	Washer	1	32		Steel Ball	18
17	EPTS-33011P-25Q-17	Washer	1	53	EPTS-33011P-25Q-53	Retainer	1	35		Steel Ball	3
18	EPTS-33011P-25Q-18	Pinion Gear	1	54	EPTS-33011P-25Q-54	Rubber Ring	1	36		Spring	1
19	EPTS-33011P-25Q-19	Pin	6	55	EPTS-33011P-25Q-55	Screwdriver	1	40		Steel Ball	3
20	EPTS-33011P-25Q-20	Rear Gear Head	1	56	EPTS-33011P-25Q-56	Bit (Option)	1	43		Torque Setting Spring	1
21	EPTS-33011P-25Q-21	Washer	1	57	EPTS-33011P-25Q-57	Hanger	1	51		Spring	1
22	EPTS-33011P-25Q-22	Planet Gear	6	58	EPTS-33011P-25Q-58	Retainer	1	59		Throttle Valve Spring	1
23	EPTS-33011P-25Q-23	Front Gear Head	1	60	EPTS-33011P-25Q-60	Throttle Valve	1	61		Steel Ball	1
24	EPTS-33011P-25Q-24	Gear Housing	1	63	EPTS-33011P-25Q-63	Bushing	1	62		O-Ring	1
25	EPTS-33011P-25Q-25	Ball Bearing	1	64	EPTS-33011P-25Q-64	Pin	1	69		Steel Ball	1
26	EPTS-33011P-25Q-26	Retainer	1	65	EPTS-33011P-25Q-65	Trigger Pin	1	70		Spring	1
27	EPTS-33011P-25Q-27	Hammer Case	1	66	EPTS-33011P-25Q-66	Reverse Valve	1	78		O-Ring	1
29	EPTS-33011P-25Q-29	Retainer	1	67	EPTS-33011P-25Q-67	Reverse Knob	1				
30	EPTS-33011P-25Q-30	Rear Clutch	1	68	EPTS-33011P-25Q-68	Screw	1				
31	EPTS-33011P-25Q-31	Ball Holder	1	71	EPTS-33011P-25Q-71	Spring Pin	1				



10000 SE PINE  
PORTLAND, OR 97216  
503-254-6600  
FAX 503-255-2615

When ordering spare parts, please specify  
tool type, part number, and description

#### FOOTNOTES