


EPTS-35005P-25Q TORQUE CONTROLLED SCREWDRIVER

EXPLODED VIEW

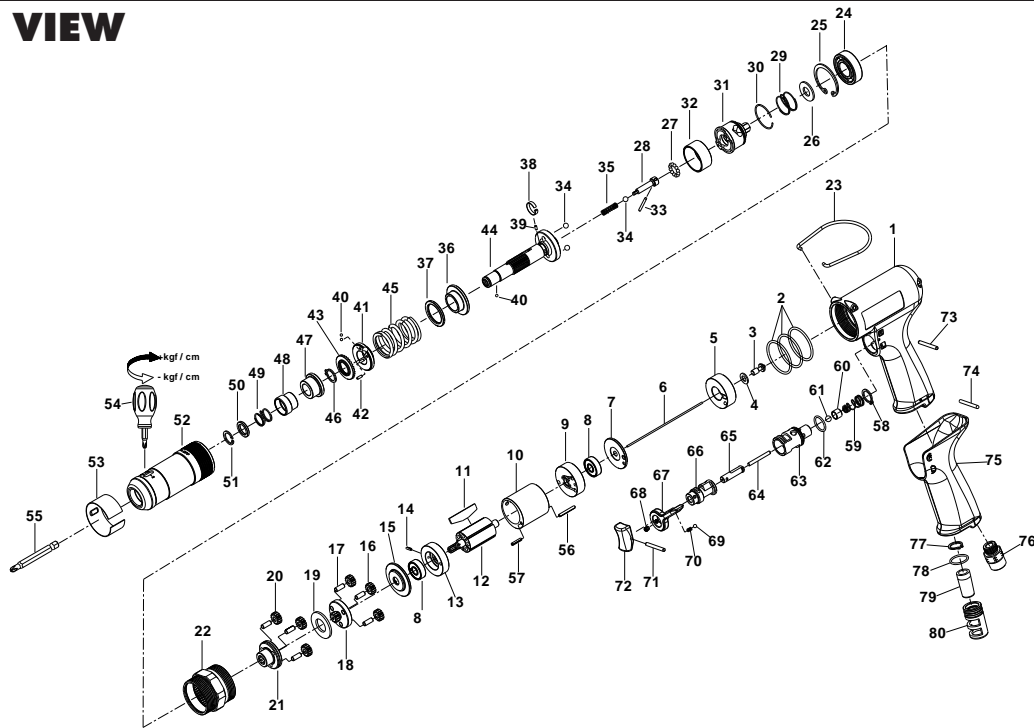

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty	Index Number	Part Number	Description	Qty.
1	EPTS-35005P-25Q-1	Motor Housing	1	44	EPTS-35005P-25Q-44	Standard Anvil	1
2	EPTS-35005P-25Q-2	O-Ring	3	45	EPTS-35005P-25Q-45	Torque Setting Spring	1
3	EPTS-35005P-25Q-3	Shut-off Valve	1	46	EPTS-35005P-25Q-46	Retainer	1
4	EPTS-35005P-25Q-4	Washer	1	47	EPTS-35005P-25Q-47	Bushing	1
5	EPTS-35005P-25Q-5	Handle Bushing	1	48	EPTS-35005P-25Q-48	Release Sleeve	1
6	EPTS-35005P-25Q-6	Throttle Valve Plunger	1	49	EPTS-35005P-25Q-49	Spring	1
7	EPTS-35005P-25Q-7	Rear Plate Space	1	50	EPTS-35005P-25Q-50	Washer	1
8	EPTS-35005P-25Q-8	Ball Bearing	2	51	EPTS-35005P-25Q-51	Retainer	1
9	EPTS-35005P-25Q-9	Rear End Plate	1	52	EPTS-35005P-25Q-52	Clutch Housing	1
10	EPTS-35005P-25Q-10	Cylinder	1	53	EPTS-35005P-25Q-53	Rubber Ring	1
11	EPTS-35005P-25Q-11	Rotor Blade	5	54	EPTS-35005P-25Q-54	Screwdriver	1
12	EPTS-35005P-25Q-12	Rotor	1	55	EPTS-35005P-25Q-55	Bit (Option)	1
13	EPTS-35005P-25Q-13	Front End Plate	1	56	EPTS-35005P-25Q-56	Spring Pin	1
14	EPTS-35005P-25Q-14	Spring Pin	1	57	EPTS-35005P-25Q-57	Spring Pin	1
15	EPTS-35005P-25Q-15	Washer	1	58	EPTS-35005P-25Q-58	Retainer	1
16	EPTS-35005P-25Q-16	Planet Gear	3	59	EPTS-35005P-25Q-59	Throttle Valve Spring	1
17	EPTS-35005P-25Q-17	Pin	6	60	EPTS-35005P-25Q-60	Throttle Valve	1
18	EPTS-35005P-25Q-18	Rear Gear Head	1	61	EPTS-35005P-25Q-61	Steel Ball	1
19	EPTS-35005P-25Q-19	Washer	1	62	EPTS-35005P-25Q-62	O-Ring	1
20	EPTS-35005P-25Q-20	Planet Gear	3	63	EPTS-35005P-25Q-63	Bushing	1
21	EPTS-35005P-25Q-21	Front Gear Head	1	64	EPTS-35005P-25Q-64	Pin	1
22	EPTS-35005P-25Q-22	Gear Housing	1	65	EPTS-35005P-25Q-65	Trigger Pin	1
23	EPTS-35005P-25Q-23	Hanger	1	66	EPTS-35005P-25Q-66	Reverse Valve	1
24	EPTS-35005P-25Q-24	Ball Bearing	1	67	EPTS-35005P-25Q-67	Everse Knob	1
25	EPTS-35005P-25Q-25	Retainer	1	68	EPTS-35005P-25Q-68	Screw	1
26	EPTS-35005P-25Q-26	Washer	1	69	EPTS-35005P-25Q-69	Steel Ball	1
27	EPTS-35005P-25Q-27	Steel Ball	12	70	EPTS-35005P-25Q-70	Spring	1
28	EPTS-35005P-25Q-28	Pilot Pin	1	71	EPTS-35005P-25Q-71	Spring Pin	1
29	EPTS-35005P-25Q-29	Spring	1	72	EPTS-35005P-25Q-72	Trigger	1
30	EPTS-35005P-25Q-30	Retainer	1	73	EPTS-35005P-25Q-73	Pin	1
31	EPTS-35005P-25Q-31	Rear Clutch	1	74	EPTS-35005P-25Q-74	Pin	1
32	EPTS-35005P-25Q-32	Ball Holder	1	75	EPTS-35005P-25Q-75	Rubber Grip	1
33	EPTS-35005P-25Q-33	Pin	1	76	EPTS-35005P-25Q-76	Air Inlet	1
34	EPTS-35005P-25Q-34	Steel Ball	3	77	EPTS-35005P-25Q-77	Retainer	1
35	EPTS-35005P-25Q-35	Spring	1	78	EPTS-35005P-25Q-78	O-Ring	1
36	EPTS-35005P-25Q-36	Central Clutch	1	79	EPTS-35005P-25Q-79	Muffler	1
37	EPTS-35005P-25Q-37	Washer	1	80	EPTS-35005P-25Q-80	Exhaust Deflector	1
38	EPTS-35005P-25Q-38	Band	1				
39	EPTS-35005P-25Q-39	Pin	1	TK	EPTS-35005P-25Q-TK	Tune-Up Kit { incl. 2 (3).11 (5).27 (12).29.34 (3).40 (3).45.49.59.61.62.69.70.78 }	
40	EPTS-35005P-25Q-40	Steel Ball	3				
41	EPTS-35005P-25Q-41	Adjustment Lock Ring	1				
42	EPTS-35005P-25Q-42	Pin	1				
43	EPTS-35005P-25Q-43	Adjustment Nut	1				

FOOTNOTES



10000 SE Pine Street
Portland, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number and description.